

## **Thermo Fan Instructions**

To change the fan from pull to push you will need to reverse the polarity and flip the fan blades so that when the fan spins the curved part of the blade is in the front of the direction of rotation

## To remove the fan

The thread on the fan shaft is a Left hand thread

To <u>Loosen</u> and remove the nut you will have to turn an 8mm spanner or socket clockwise, the opposite way that a thread would normally work

To <u>Tighten</u> the nut after changing the fan orientation you need to turn it anticlockwise

Any questions please call us on 0418675170